COMPACT BETA HAND MONITOR

Model # BHM-100S



CE



TBM-3DLA

PBS-H100



COMPACT BETA HAND MONITOR

Model # BHM-100S

COM	PACT	RFTAI	HAND M	IONII.	TORS					
CCIVI	1 / (0 1									
/ersatile	system									
	able alarm l	evels								
wo mode	es:									
Ratemeter- Frisker mode										
re-set co	ount-time (u	ser settable)								
Probes ar	e thin and v	vall mountable	ė							
Electronic	s, compact	, versatile								
	CHOICE (OF BETA SCI	NTILLATION	PROBES	<u> </u> }					
MODEL		PBS-H100		PBS-H3		PBS-F350				
Descriptio	on T	Hand-swipe		Hand ful	l size	Foot full si	ze			
Notive are		100cm2		200am2		350cm2				
Active area Active dimensions		3"x6"		300cm2 5"x9.25"		4.25"x12.7	F"		-	
Over all dimensions		1.6"x4"x13"		5 X9.25 1.6"x6"x		4.25" x 12.7 1.6" x 4" x 13				
over all di	THERISIONS	1.0 X4 X13		א"טא ס.ו	10.5	ו.ס ג4 ג13	•			
Beta Scin	tillation	0 020" thick	organic phase	hor						
			organic phosp g of large surfa						-	
			g of large surfa er than 50KeV.							
			by a 79% ope							
ine wind	OW IS HOHITE	lily protected	by a 79% ope	ii giid						
MODEL		TBM-3DLA								
Digital sca	aler/ratemet	er as describ	ed on specification	ation she	et					
	ADDITION	IAL ODEOLE	0.4.71.0.110							
20WED	ADDITION	NAL SPECIFI		Daabaua				-		
POWER	HOATIONO		Rechargeable							
COMMUN	IICATIONS		Serial port is standard			1				
			USB (or ethernet port) are optional			U.				
ALARM			Audible and \	∣ /isual. Se	et points an	d latching e	etc are use	er settable		
THRESHO	DLDS		Low level disc	riminator	r is user adj	ustable sta	ndard.			
			Upper level th	reshold f	or Window	operation is	optional.			
PARAME	TER SETTI	NGS	These can be	done fro	m the front	panel, or fro	om a PC ι	ınless		
			front panel so	ettings are locked in from the PC setup						
OPTIONS										
OPTIONS	•Pre-amp	for proportion								
OPTIONS	•Pre-amp	nnectors - MH	IV etc							
OPTIONS	Pre-ampOther corAdjustab	nnectors - MH le window abo	IV etc							
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	HV etc ove threshold							
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	IV etc	ff Overvie	w , Datalog	and Netwo	rk Softwar	re		
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	HV etc ove threshold	ff Overvie	w , Datalog	and Netwo	rk Softwar	re		
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	HV etc ove threshold	ff Overvie	w , Datalog	and Netwo	rk Softwar	е		
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	HV etc ove threshold	ff Overvie	w , Datalog	and Netwo	rk Softwar	e		
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	HV etc ove threshold	ff Overvie	w , Datalog	and Netwo	rk Softwar	re		
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	HV etc ove threshold	ff Overvie	w , Datalog	and Netwo	rk Softwar	e		
OPTIONS	Pre-ampOther corAdjustableEternal a	nnectors - MF le window abo larm jack	HV etc ove threshold	ff Overvie	w , Datalog	and Netwo	rk Softwar	e		