


AIR MONITOR-GAS,GROSS BETA-GAMMA PARTICULATE, AND IODINE PROGRAM SCREENSHOTS


A. Figure 1. "Alarm Setup Screen"

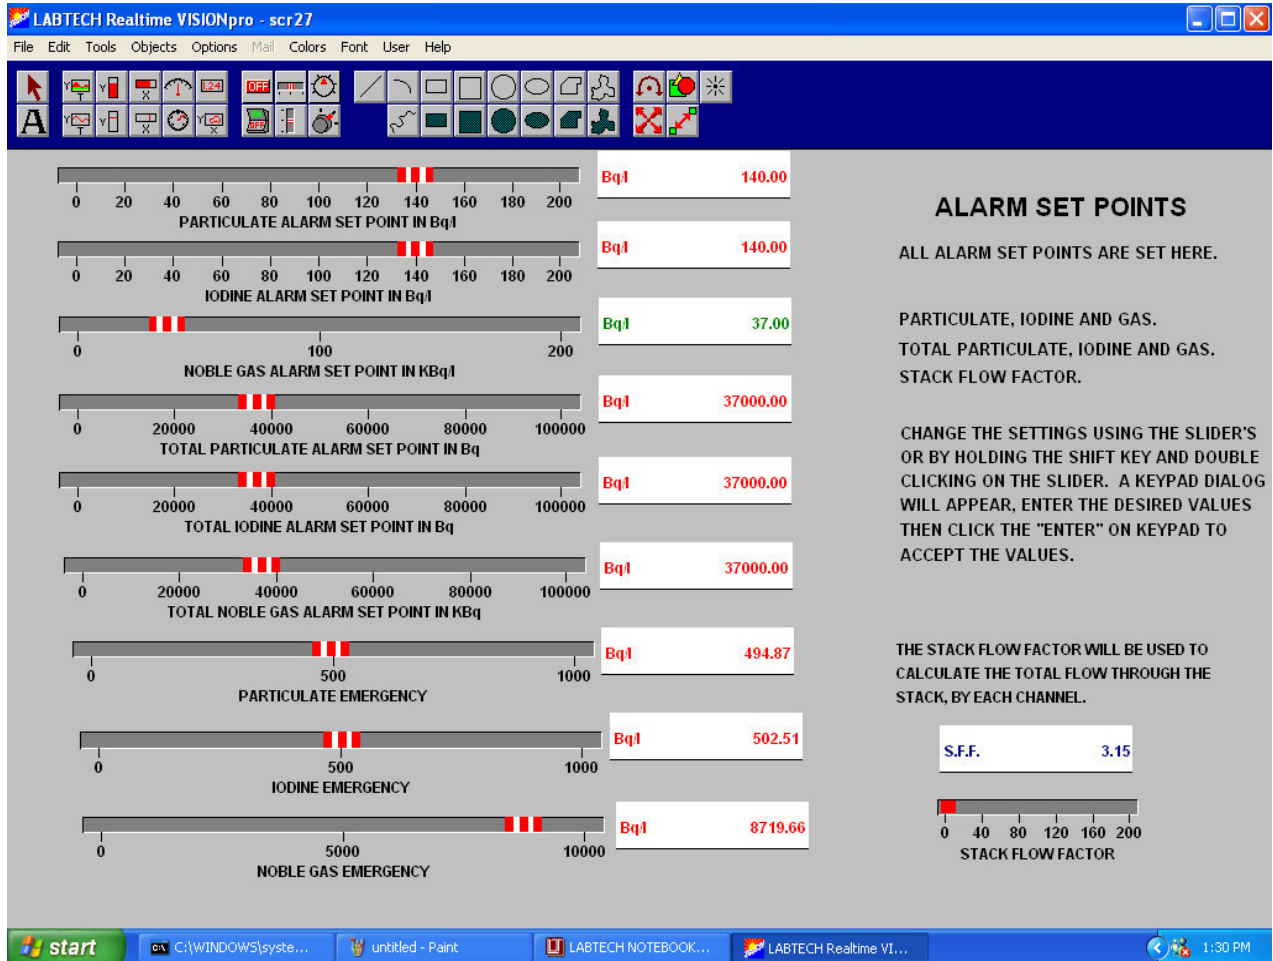

This screenshot allows you to set all **Alarm Set Points** for the Particulate, Iodine, and Nobel Gas Chambers.

AIR MONITOR-GAS,GROSS BETA-GAMMA PARTICULATE, AND IODINE PROGRAM SCREENSHOTS


B. Figure 2. "Iodine Calibration Screen"

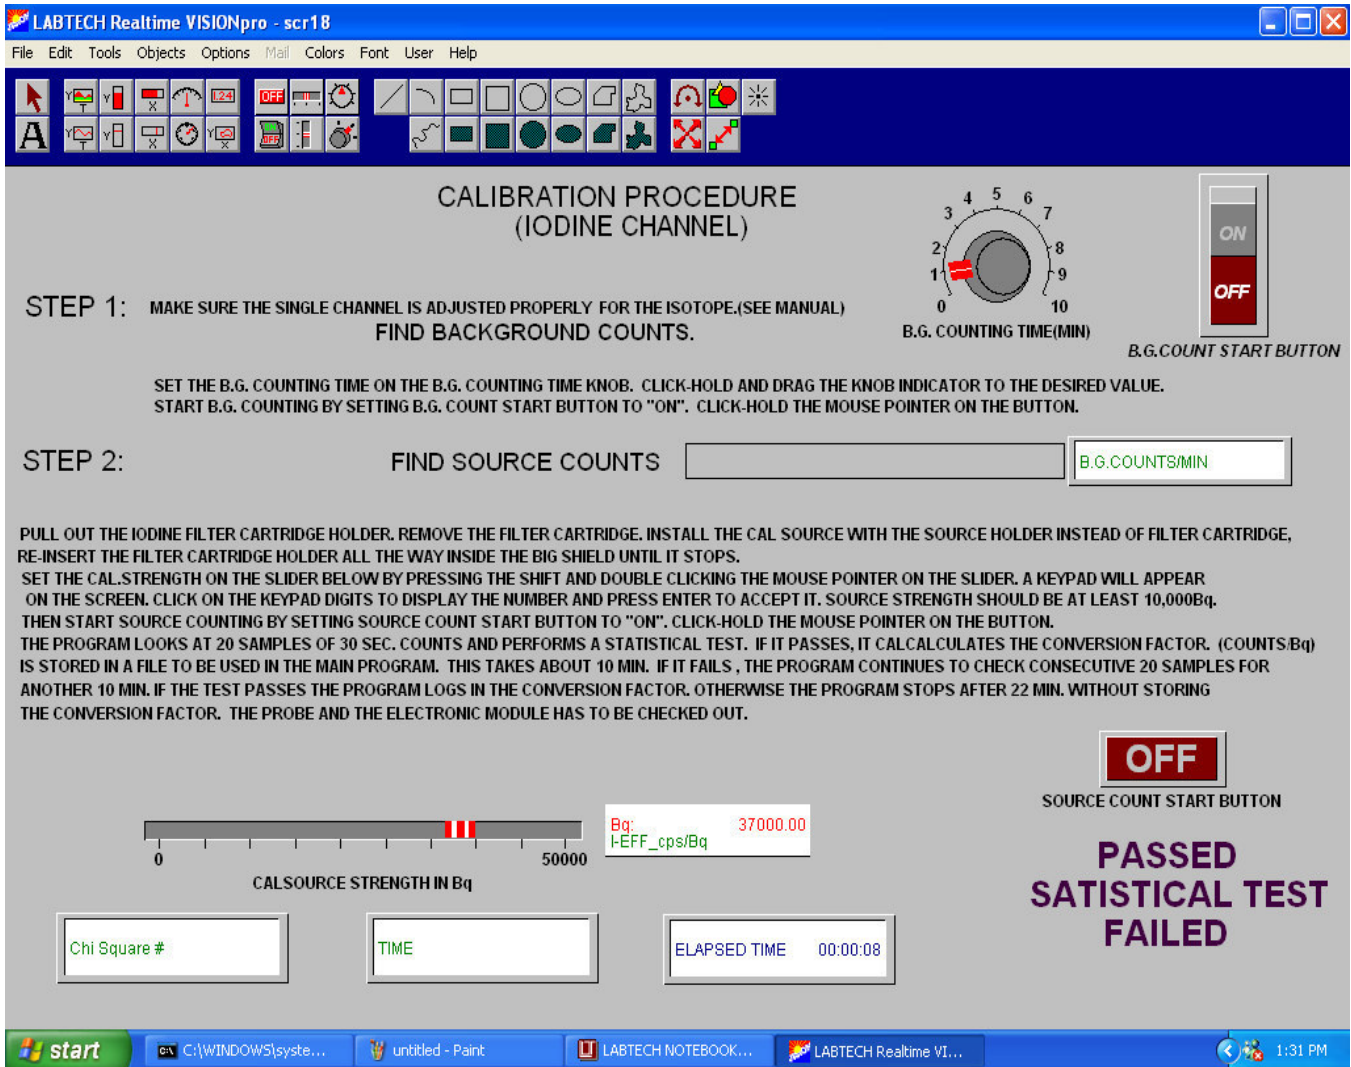

This screenshot Displays and Finds both **Background** and **Source Counts**. It is also able to Measure ant set Parameters.

AIR MONITOR-GAS,GROSS BETA-GAMMA PARTICULATE, AND IODINE PROGRAM SCREENSHOTS


C. Figure 3. "Nobel Gas Calibration" Screen

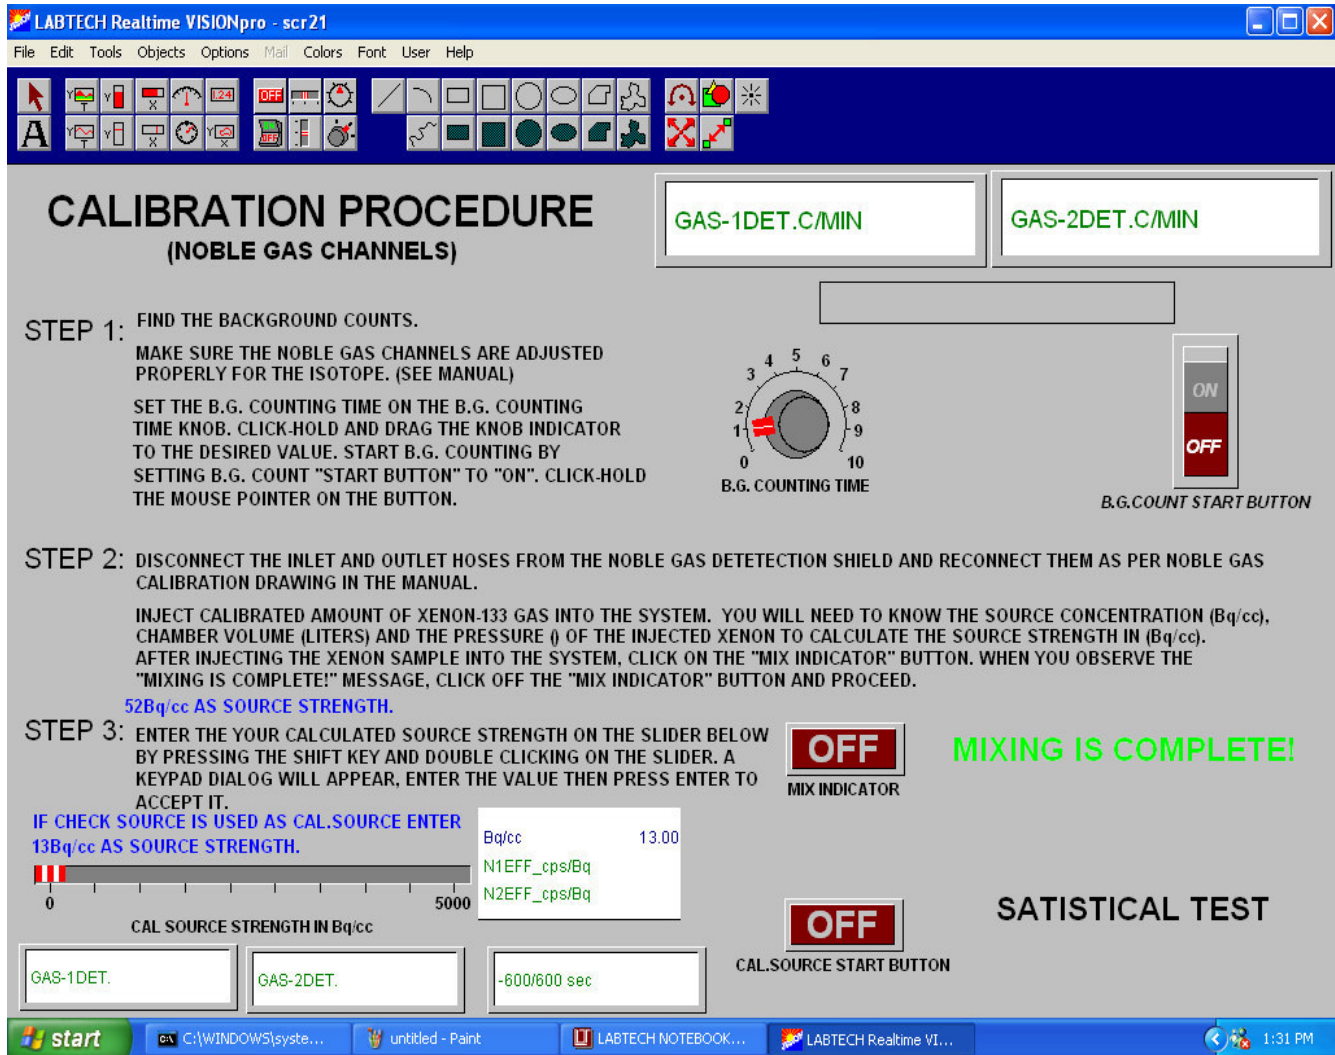

This screenshot displays **Background Counts** found through the **Nobel Gas Chamber**. **Background and Source Count** time is adjusted here as well.

AIR MONITOR-GAS,GROSS BETA-GAMMA PARTICULATE, AND IODINE PROGRAM SCREENSHOTS

D. Figure 4. "Particulate Calibration" Screen

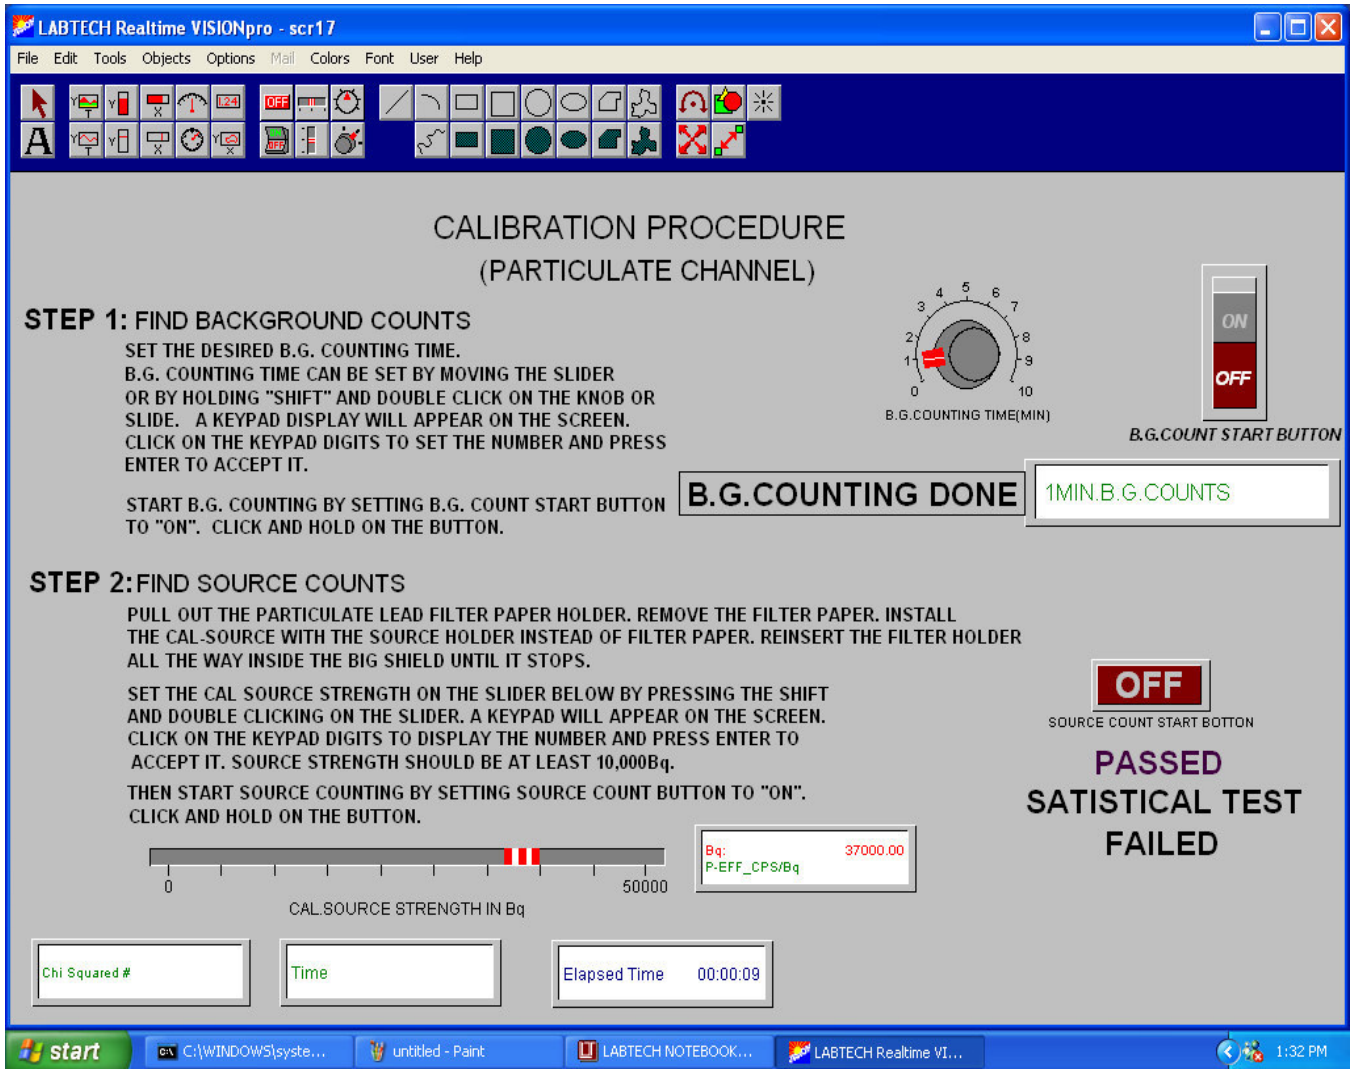

This Screenshot displays **Background and Source** counts Found through the particulate Chamber. **Background and Source Counts** are adjusted through this screen.


AIR MONITOR-GAS,GROSS BETA-GAMMA PARTICULATE, AND IODINE PROGRAM SCREENSHOTS

E. "Check Source" screen Not Shown

F. "FM Graphs" screen Not Shown This creates Trend Graphs of most recent 7 Day, 30 Day and 1 Yr Readings

G. "InstaCal Start Up" screen Not Shown

H. "Main " Screenshot

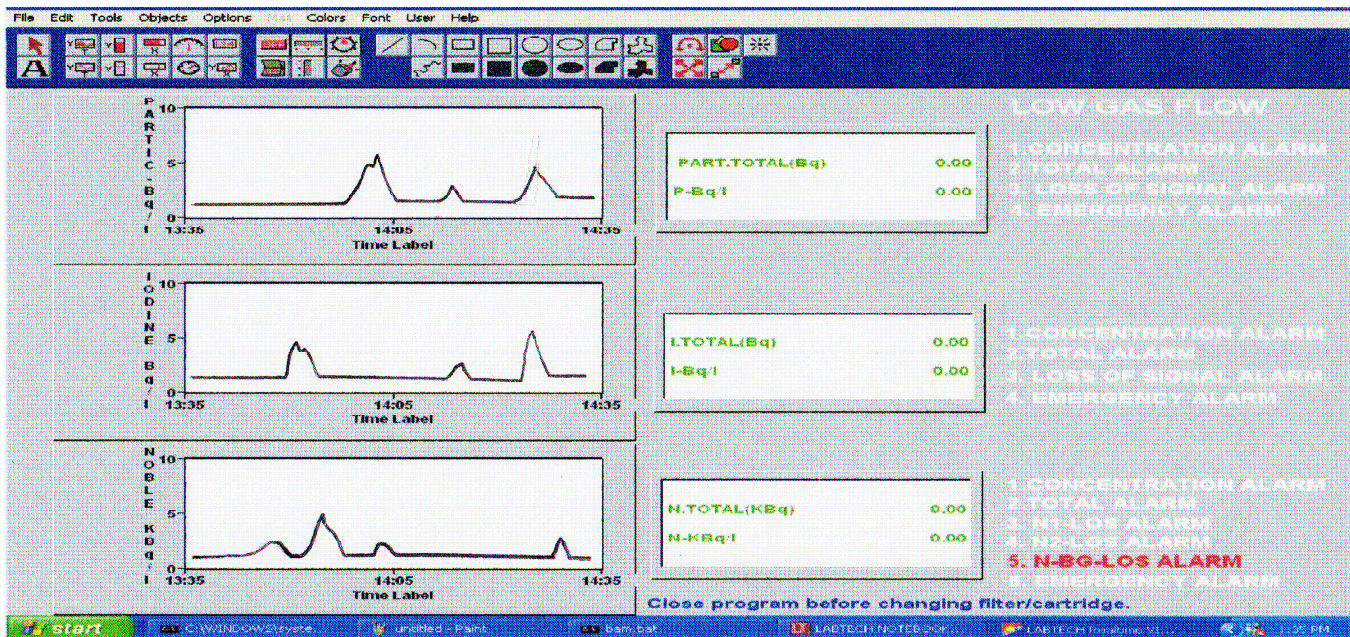


This Screenshot displays the **Particulate, Iodine, and Nobel Gas Chamber** system main functions:

1. Realtime Airborne Concentration – Three Channels
2. Total Daily Release – All Three Channels
3. All Data Archived to Disk every 2 minutes

**AIR MONITOR-GAS,GROSS BETA-GAMMA
PARTICULATE, AND IODINE
PROGRAM SCREENSHOTS**

I. Figure 5. 4 to 20 mA Setup Screen

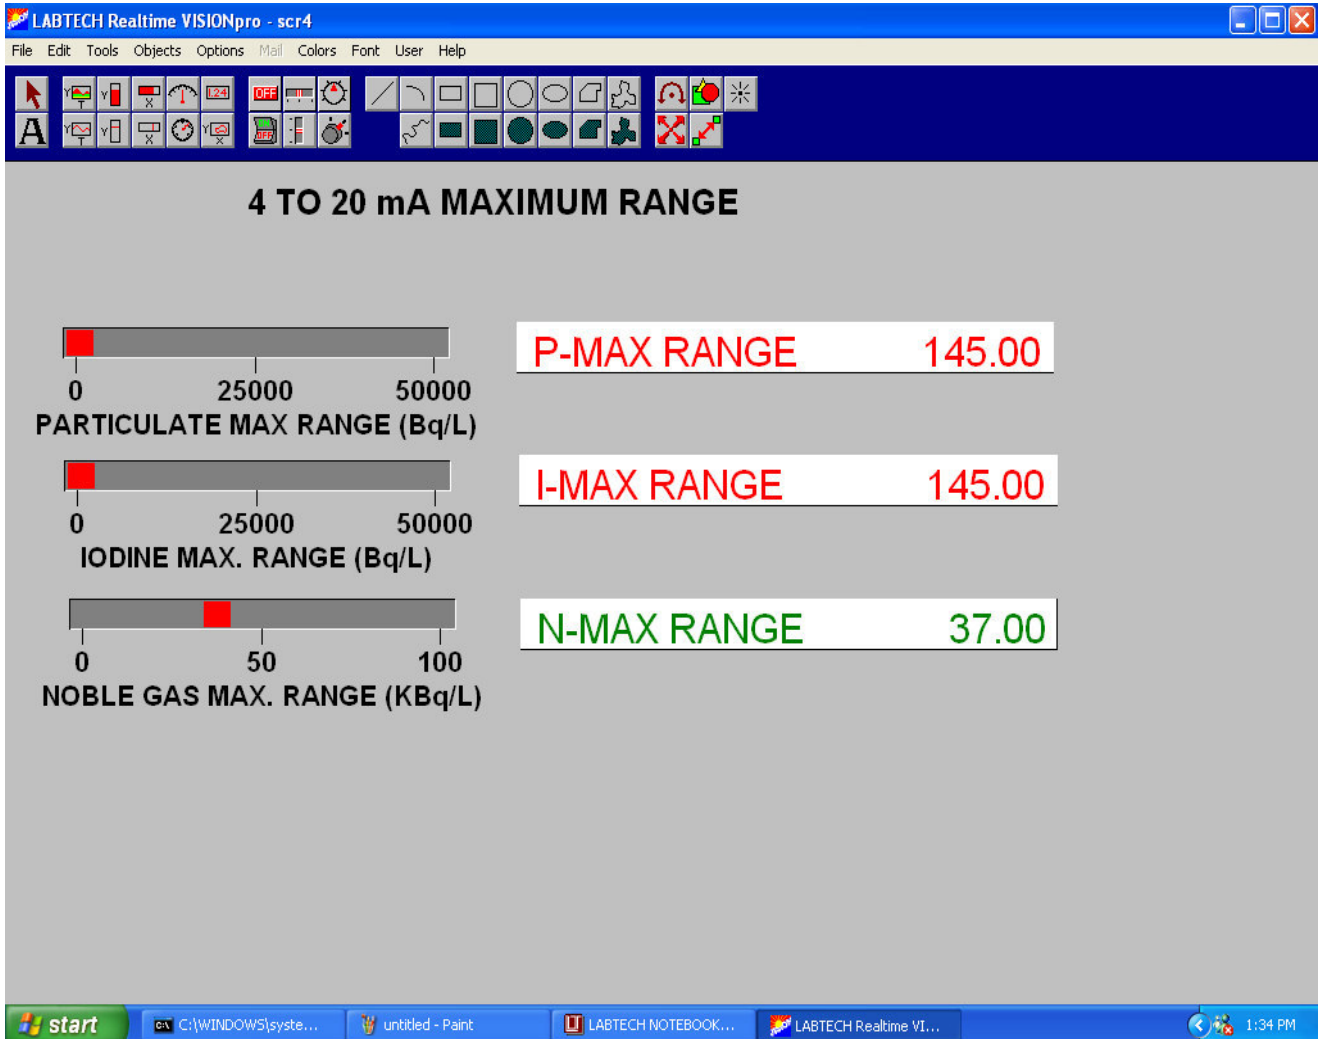


This screenshot displays the **4 to 20 mA setup** for the **Particulate, Iodine, and Nobel Gas Chambers**. The maximum ranges for each chamber is adjustable as shown above.

J. "Batch File" Not Shown: Controls Daily 24 Hr. midnight turn over Reset of data and daily release Totals.

AIR MONITOR-GAS,GROSS BETA-GAMMA PARTICULATE, AND IODINE PROGRAM SCREENSHOTS

K. Figure 6. "Test" Screen

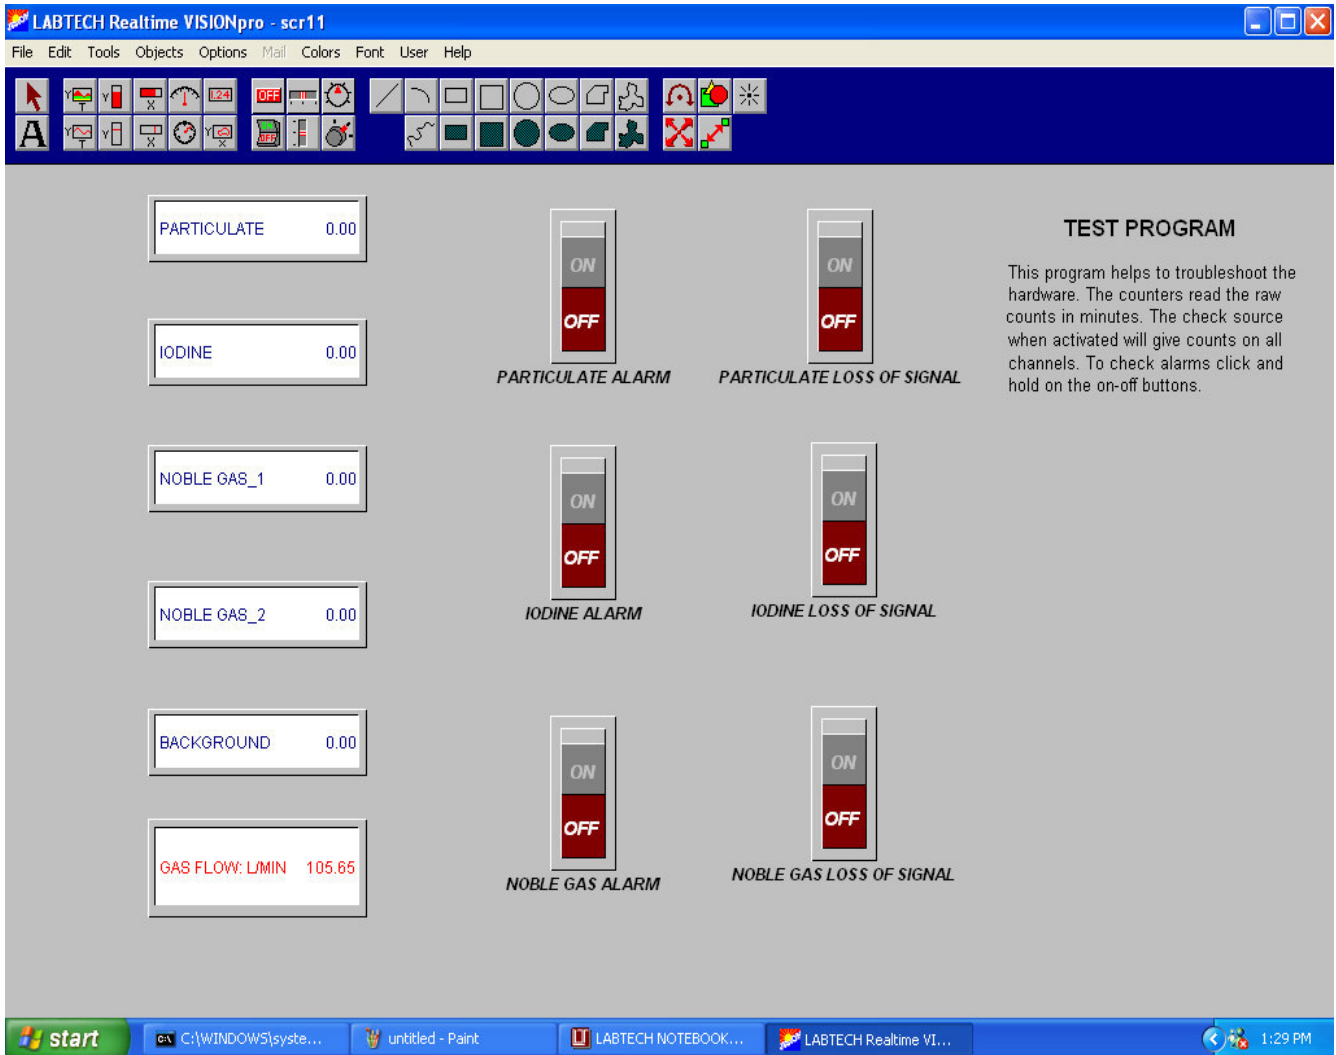

This Screenshot displays the various sections of the system that are tested for troubleshooting or simply confirm they are working properly. They can be activated singly or all together for testing.