

AUTOMATED FLOW THRU TRITIUM WATER MONITOR

MODEL - TRIMARAN – H₂O & TRIMARAN – H₂O-ES

FEATURES:

- SENSITIVE ENOUGH TO DETECT RUN-OFF CHANGES IN GROUNDWATER TRITIUM PLUMES.
- LOW LEVEL REAL TIME CONTINUOUS TRITIUM-IN-WATER MONITOR
- OPTIONAL: CAPTURE & HOLD SAMPLING SYSTEM
- 6 PORT INTAKE MANIFOLD FOR SAMPLING 6 INDIVIDUAL INPUT LINES, SAMPLED IN SERIES
- TRITIUM ONLY; IGNORES OTHER NUCLIDES

SENSITIVITY OF TRIMARAN-H₂O (STANDARD)

- 13,500 pCi/l IN 8 HOURS
- 6,750 pCi/l - DETECTABLE IN 24 HOURS

SENSITIVITY OF TRIMARAN-H₂O-ES (ENHANCED)

- 13,500 pCi/l IN 10 MINUTES
- 6,750 pCi/l - DETECTABLE IN 12 HOURS

- NO LSC FLUID / NO WASTE PRODUCT
- FULL ON-BOARD COMPUTING SYSTEM FOR DATA ACQUISITION, ANALYSIS, ARCHIVING & RETRIEVAL
- USB, **OPTIONAL** 4-20 mA
- EASY INTEGRATION INTO FACILITY MAINFRAME
- USER SETTABLE – UNITS, ALARM LIMITS, FLOW RATE, ETC.
- RUGGED, RELIABLE, SIMPLE OPERATION
- STEEL FRAME MOUNTED; **IP42**



APPLICATION:

Monitoring changes in Tritium concentration in primary and secondary coolant, entering or leaving the Recombiner, make-up pond or spent fuel pool, etc.

Other applications include monitoring Tritium in processed water, storm water, drain effluent, ground water, rivers, lakes, and ocean currents.

Eliminates the need for pulling samples manually; waiting on expensive lab results. This automated system frees valuable and expensive personnel for other duties.

LOW END SENSITIVITIES					
H ₂ O-ES	H ₂ O	H ₂ O-ES	H ₂ O	H ₂ O	H ₂ O
MDA	MDA	MDA	MDA	MDA	MDA
10 MINUTES	8 HOURS	12 HOURS	24 HOURS	7 DAYS	ONE MONTH
500 Bq/L	500 Bq/L	250 Bq/L	250 Bq/L	40 Bq/L	TBD
13,500 pCi/L	13,500 pCi/L	6,750 pCi/L	6,750 pCi/L	1000 pCi/L	TBD



TECHNICAL ASSOCIATES
OVERHOFF TECHNOLOGY

7051 Eton Ave., Canoga Park, CA 91303

818-883-7043 (Phone) ~ 818-883-6103 (Fax) ~ 818-836-0381 (Cell)

sales@usnuclearcorp.com

WWW.TECH-ASSOCIATES.COM

Divisions of



US NUCLEAR CORP

Ticker UCLE

AUTOMATED FLOW THRU TRITIUM WATER MONITOR

MODEL - TRIMARAN – H₂O & TRIMARAN – H₂O-ES

DESCRIPTION:

FULLY INTEGRATED PACKAGE

Model Trimaran-H₂O is a completely self-contained instrument for real time continuous detection of Tritium concentration in water. The instrument is mounted inside a rugged built 200 cm tall steel enclosure with reinforced anchoring feet and locked access.

P-10 gas (90% Argon, 10% Methane, non-combustible) cylinder is connected to the unit externally. This quantity is sufficient for 60 days of continuous operation.

The main subassemblies are:

1. Sample water input lines
2. Pre-filter
3. External cooling loop in case of hot samples
4. PRV and RV system with manifolds
5. Water purification system (oil-in-water and micron filter)
6. Sample water pump
7. Detection module
8. Data acquisition electronics module
9. System control module
10. Waste water output line, RV output line and sample bypass output lines
11. Sample Enrichment assembly

PRESSURE REGULATING EQUIPMENT

Pressure of input sample streams can be up to 103 kPa. The pressure is immediately reduced to 2-3psi via Pressure Regulating Valves (PRV).

Each PRV is associated with Pressure Relieve Valve set to open at 100 kPa, preventing the pressure in the system from being more than 100 kPa, in turn making it safe to handle.

This also makes the instrument **Class 6 Nuclear Device**.

LOW MINIMUM DETECTABLE ACTIVITY (MDA):

- The Trimaran H₂O detects Tritium decay extracting T₂ and H₂ from water, enriching/concentrating the sample.
- Sensitive measurement is made with matched gas flow proportional counters.
- 1/8" lead or equivalent shielding minimizes cosmic and Gamma radiation effects providing low back- ground noise. **OPTIONAL** 1/2" lead or equivalent shielding.

REMOTE MONITORING & ALARMING:

- USB, Ethernet & **OPTIONAL** 4-20mA output.
- 2 alarm outputs & malfunction outputs in the form of dry, fail-safe, relay contacts.
- Alarms are user adjustable.
- Malfunction alarms activate in case of electronics &/or mechanical failures in the system.



TECHNICAL ASSOCIATES
OVERHOFF TECHNOLOGY

7051 Eton Ave., Canoga Park, CA 91303

818-883-7043 (Phone) ~ 818-883-6103 (Fax) ~ 818-836-0381 (Cell)

sales@usnuclearcorp.com

WWW.TECH-ASSOCIATES.COM

Divisions of



US NUCLEAR CORP

Ticker UCLE

AUTOMATED FLOW THRU TRITIUM WATER MONITOR

MODEL - TRIMARAN – H₂O & TRIMARAN – H₂O-ES

SPECIFICATIONS:

ELECTRONICS & MEASUREMENT:

MEASUREMENT RANGE:	0 kBq/L – 130 kBq/L 4.5 Decades OPTIONAL: 6 Decades
SENSITIVITY:	See Chart
DETECTABLE LIMIT:	1,500 pCi/L (in 1 week) at confidence level of 95%
DISPLAY:	LCD Touch Screen Monitor
UNITS:	User Settable
MEASUREMENT METHOD:	Gas flow proportional counters
PROPORTIONAL COUNTERS:	Dual copper clad acrylic counter tubes, 2 liter active volume, 2.5 liter wetted volume, 0.001 inch tungsten collector anode
COUNTER GAS:	P-10 or "MAGIC" gas for high performance
FLOW RATE:	250 cc/min, typical - Continuous Flow is Standard OPTIONAL: Capture & Hold Sampling
ON BOARD COMPUTER:	Data-analysis, Archive, Retrieval,
OUTPUT:	USB & Ethernet OPTIONAL 4-20mA
SIGNAL PROCESSING:	Electronic signal processing of coincident pulses for Tritium specific wave shapes (height and duration)
ALARM SET POINT:	User Settable

SAMPLING SYSTEM:

See Diagram

ENVIRONMENTAL:

TEMPERATURE:	0° C to 50° C
HUMIDITY:	0 to 95 % R. H.
SEISMIC:	Withstands modest shock
GENERAL:	Equipment to be sheltered from exposure to raw elements.

POWER

ELECTRICAL:	Power 110/230VAC, 10A main power, +24VDC for 4-20mA and connections for the remote alarms and monitoring
--------------------	--

WEIGHT & DIMENSIONS:

DIMENSIONS:	31.5" W x 23.6" D x 84" H (800mm x 600mm x 2133mm)
WEIGHT:	1100 lb (~500 kg)
MECHANICAL:	Self-contained, mounted on a steel frame with lifting eyes for easy transport.



TECHNICAL ASSOCIATES
OVERHOFF TECHNOLOGY

7051 Eton Ave., Canoga Park, CA 91303

818-883-7043 (Phone) ~ 818-883-6103 (Fax) ~ 818-836-0381 (Cell)


sales@usnuclearcorp.com

WWW.TECH-ASSOCIATES.COM


Divisions of  US NUCLEAR CORP
Ticker UCLE

AUTOMATED FLOW THRU TRITIUM WATER MONITOR

MODEL - TRIMARAN – H₂O & TRIMARAN – H₂O-ES

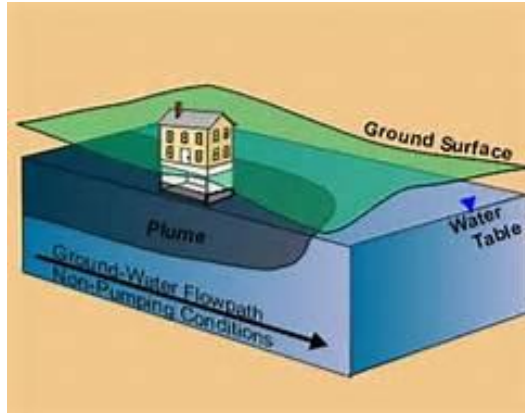

**SENSITIVE ENOUGH TO DETECT RUNOFF CHANGES
IN GROUNDWATER TRITIUM PLUMES**

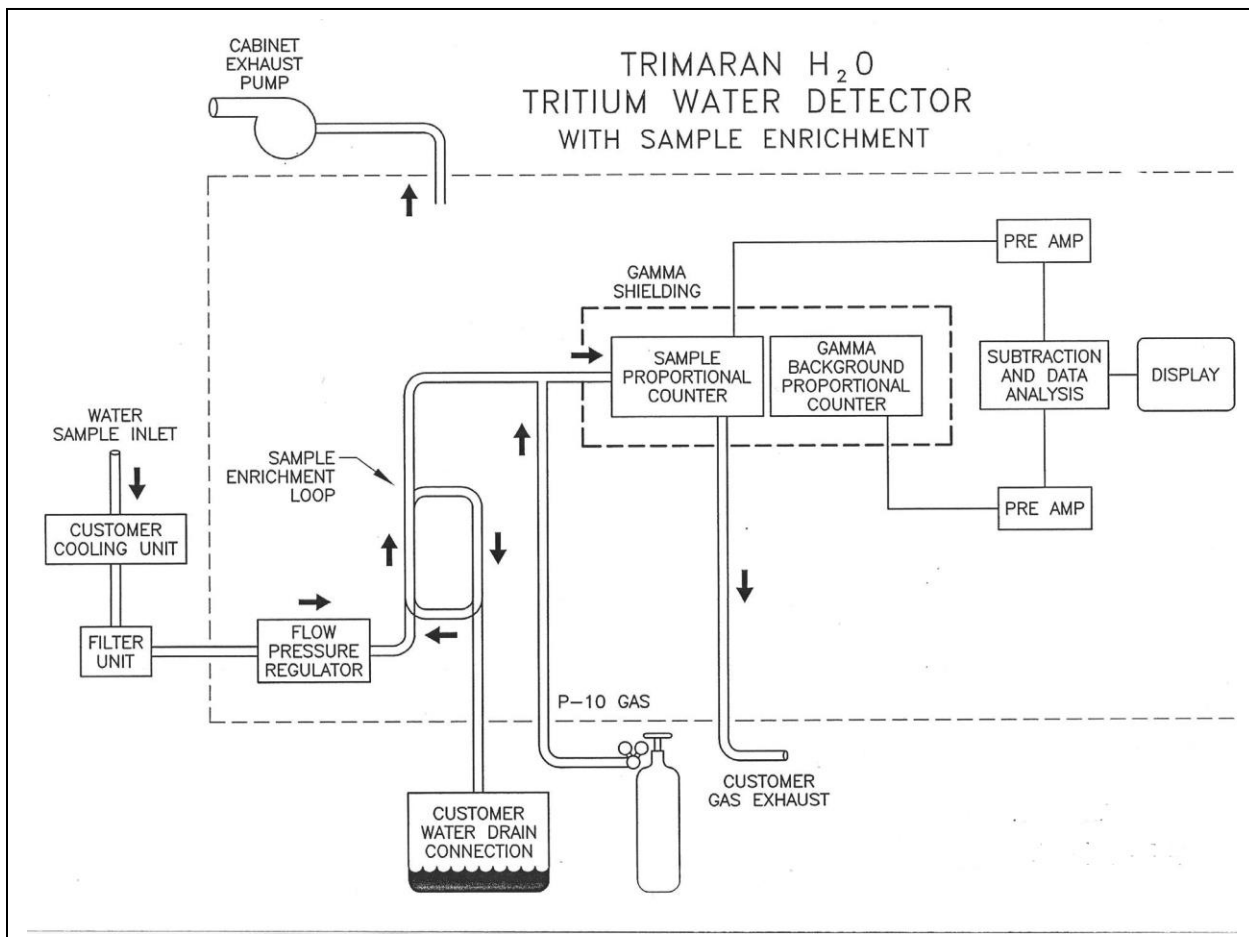

TRIMARAN-H₂O FLOW PATH




**TECHNICAL ASSOCIATES
OVERHOFF TECHNOLOGY**

7051 Eton Ave., Canoga Park, CA 91303

818-883-7043 (Phone) ~ 818-883-6103 (Fax) ~ 818-836-0381 (Cell)

sales@usnuclearcorp.com

WWW.TECH-ASSOCIATES.COM

Divisions of  US NUCLEAR CORP
Ticker UCLE

AUTOMATED FLOW THRU TRITIUM WATER MONITOR

MODEL - TRIMARAN – H₂O & TRIMARAN – H₂O-ES

PLC CONTROL

- Sampling of input lines and control of alarms and pumps is done by PLC unit placed inside of the System Control Module.
- An alarm & a manual override are provided in case of PLC failure providing manual operation until PLC is replaced.
- **Manual operation is a backup system**; the unit normally operates in automatic mode.

ROUTINE MAINTENANCE

Scheduled maintenance of consumables is required.

P-10 gas cylinder needs to be replenished every 2 months

Sample air filters need to be replaced when needed.

Periodic check of the efficiency & background is recommended if there is a possibility of increased background contamination & due to standard life cycle of electronics components.

ANNUAL INSPECTION AND SERVICE

It is recommended that the instrument be inspected and serviced on an annual basis to ensure continuing trouble free operation. All components of the instrument should be inspected and instrument re-calibrated.

REPAIR

Equipment failures of a minor nature can be repaired under local supervision by the operator of the equipment. When necessary, the manufacturer (Technical Associates / Overhoff Technology), or its agents can dispatch service personnel for quick remediate action.

DOCUMENTATION

All Technical Associates / Overhoff Technology equipment is accompanied by complete documentation, which includes the following:

1. User & Maintenance Manual that contains:
 - a) Theory of operation
 - b) Installation instructions
 - c) Operation instructions
 - d) Calibration procedure
 - e) Suggested maintenance
 - f) Repair instructions
 - g) Drawings, diagrams and schematics

Training will be provided by the manufacturer, at this factory, free of charge. Assistance with commissioning is also available by the manufacturer (Technical Associates / Overhoff Technology).




TECHNICAL ASSOCIATES
OVERHOFF TECHNOLOGY

7051 Eton Ave., Canoga Park, CA 91303

818-883-7043 (Phone) ~ 818-883-6103 (Fax) ~ 818-836-0381 (Cell)

sales@usnuclearcorp.com

WWW.TECH-ASSOCIATES.COM

Divisions of  US NUCLEAR CORP
Ticker UCLE

AUTOMATED FLOW THRU TRITIUM WATER MONITOR

MODEL - TRIMARAN – H₂O & TRIMARAN – H₂O-ES

ADVANTAGES OF PROPORTIONAL COUNTING SYSTEM VERSUS LIQUID SCINTILLATION

Prior to the development of the Trimaran H₂O, the only detectors capable of measuring very low levels of Tritium in water were Liquid Scintillation Counting (LSC) based. The LSC approach has some obvious disadvantages, such as: the LSC fluid must be constantly refilled at a significant cost in labor, money, and space; LSC fluid is also hazardous material and mixing with tritium results in 'liquid mixed waste,' which must be carefully stored, transported and disposed of.

The **Trimaran H₂O** utilizes proportional counting technology. A compact standard steel tank of proportional gas will last for more than a month & is readily available from a variety of suppliers.

The P-10 counting gas is 90% Argon and 10% Methane, is not toxic or combustible.

Measurement with this method achieves same or better low-end Tritium sensitivity, without having to deal with LSC fluid and waste.

The **Trimaran H₂O** has a 6 port intake manifold for sampling 6 individual input lines, sampled in series.

SAMPLE ENRICHMENT

With LSC and proportional counting detectors, Technical Associates / Overhoff Technology has pushed Tritium detection to the most sensitive limit.

Samples can be diluted even with large multi-liter detectors there are not enough disintegrations per second for good measurements. This issue is overcome by concentrating or enriching the sample.

This may be accomplished using iterative processes to concentrate the Tritium in water using phase change or other physical differences (not chemical processes since 1H, 2H, and 3H are chemically identical.)

Technical Associates / Overhoff Technology scientists have developed their own proprietary sample enrichment cycle, creating system sensitivities far beyond other automated flow-through systems



TECHNICAL ASSOCIATES
OVERHOFF TECHNOLOGY

7051 Eton Ave., Canoga Park, CA 91303

818-883-7043 (Phone) ~ 818-883-6103 (Fax) ~ 818-836-0381 (Cell)

sales@usnuclearcorp.com

WWW.TECH-ASSOCIATES.COM

Divisions of  US NUCLEAR CORP
Ticker UCLE